

Product Group	UK MODEL NUMBER	Part Number of Spare Part	Spare part description	Drawing Ref	Product Group	UK MODEL NUMBER	Part Number of Spare Part	Spare part description	Drawing Ref
Oven	BEKO SG 572 S	419920274	BURNER PLATE DG582S	6	Oven	BEKO SG 572 S	410920508	HANDLE GRILL PAN DCG8511	209
Oven	BEKO SG 572 S	418906648	CONTROL PANEL SG572S	9	Oven	BEKO SG 572 S	490920061	MAIN OVEN DOOR INNER GLASS	290
Oven	BEKO SG 572 S	415110026	PROTECTION SHEET	11	Oven	BEKO SG 572 S	255311001	OVEN SPARK PLUG SCG180W	327
Oven	BEKO SG 572 S	418920454	SIDE WALL DVC62NS	12	Oven	BEKO SG 572 S	419920278	BURNER CAP 1KW	338
Oven	BEKO SG 572 S	250100057	FOOT	14	Oven	BEKO SG 572 S	419920279	BURNER CAP 2KW	339
Oven	BEKO SG 572 S	418100058	BASEPLATE	15	Oven	BEKO SG 572 S	419920280	BURNER CAP 3KW	341
Oven	BEKO SG 572 S	166900015	TERMINAL BLOCK BF01X BS01W	19	Oven	BEKO SG 572 S	423920044	BURNER HEAD 1KW	342
Oven	BEKO SG 572 S	410900018	MAINS TERMINAL BLOCK LEISURE	19	Oven	BEKO SG 572 S	423920045	BURNER HEAD 2KW	343
Oven	BEKO SG 572 S	419920039	OVEN BODY	20	Oven	BEKO SG 572 S	423920046	BURNER HEAD 3KW	345
Oven	BEKO SG 572 S	291100012	GLASS WOOL FOR OVEN BODY	21	Oven	BEKO SG 572 S	223910020	BURNER GROUP 1KW	346
Oven	BEKO SG 572 S	41920137	MAIN OVEN FLUE GROUP	24	Oven	BEKO SG 572 S	223910019	BURNER GROUP 2KW	347
Oven	BEKO SG 572 S	440100001	GRILL RACK FULL WIDTH SC160 SCG180 v	27	Oven	BEKO SG 572 S	223910018	BURNER GROUP 3KW	349
Oven	BEKO SG 572 S	419920053	BAKING TRAY/GRILL PAN ALL MODELS	28	Oven	BEKO SG 572 S	431900027	NATURAL GAS INJECTOR 1KW	350
Oven	BEKO SG 572 S	455920002	SEAL OVEN DOOR DCC4531 DC3511	29	Oven	BEKO SG 572 S	431900026	NATURAL GAS INJECTOR 2KW	351
Oven	BEKO SG 572 S	415920020	REAR SUPPORT	30	Oven	BEKO SG 572 S	431100011	NATURAL GAS INJECTOR 2.5KW SCG180W	352
Oven	BEKO SG 572 S	415920139	BOTTOM LID HINGE	33	Oven	BEKO SG 572 S	431900028	NATURAL GAS INJECTOR 3KW	353
Oven	BEKO SG 572 S	489100001	COUNTER WEIGHT	36	Oven	BEKO SG 572 S	419900027	GRILL BURNER PROTECTION SHEET v	360
Oven	BEKO SG 572 S	415920057	SIDE WALL TOP SUPPORT BRACKET DVGCK5G	39	Oven	BEKO SG 572 S	242100050	KNOB SPRING	363
Oven	BEKO SG 572 S	419920225	MAIN OVEN DOOR INNER PANEL SG752	42	Oven	BEKO SG 572 S	250944460	KNOB DG582S	364
Oven	BEKO SG 572 S	410920355	OVEN HINGE	45	Oven	BEKO SG 572 S	250944525	TOP OVEN/GRILL KNOB	364
Oven	BEKO SG 572 S	458920112	HANDLE SG752S	47	Oven	BEKO SG 572 S	250910098	KNOB DG582S	367
Oven	BEKO SG 572 S	418920576	STORAGE DRAWER FRONT SG752S	48	Oven	BEKO SG 572 S	419110088	PAN SUPPORT	377
Oven	BEKO SG 572 S	418920603	STORAGE DRAWER BOTTOM SHEET SG752S	49	Oven	BEKO SG 572 S	231900059	GAS TAP 1KW	378
Oven	BEKO SG 572 S	258100004	BOTTOM LID HINGE BRACKET SCG180 SC1521	50	Oven	BEKO SG 572 S	231900060	GAS TAP 2KW	379
Oven	BEKO SG 572 S	442920005	BOTTOM LID SPRING SC1521	51	Oven	BEKO SG 572 S	231900062	GAS TAP 2.5KW	381
Oven	BEKO SG 572 S	450920001	BOTTOM LID BRACKET HOUSING SC1530 SC1521	52	Oven	BEKO SG 572 S	421311005	OVEN FEEDING TUBE	382
Oven	BEKO SG 572 S	416100002	WASHER FOR INNER GLASS FIXING v	56	Oven	BEKO SG 572 S	221100073	FEEDING TUBE(REAR RIGHT)	384
Oven	BEKO SG 572 S	268900020	SPARK PLUG CM10FR	62	Oven	BEKO SG 572 S	421920075	FEEDING TUBE (REAR RIGHT)	384
Oven	BEKO SG 572 S	268900026	SPARK PLUG	62	Oven	BEKO SG 572 S	421920075	FEEDING TUBE (REAR RIGHT)	385
Oven	BEKO SG 572 S	410920137	FLUE TOP PART GROUP	491	Oven	BEKO SG 572 S	421920074	FEEDING TUBE (	387
Oven	BEKO SG 572 S	455920022	MAIN OVEN DOOR INNER GLASS SEAL	702	Oven	BEKO SG 572 S	255100016	TAP SEAL	406
Oven	BEKO SG 572 S	410920405	MAIN GAS PIPE GROUP	67	Oven	BEKO SG 572 S	458920133	PLINTH DECOR	449
Oven	BEKO SG 572 S	469000005	IGNITION ASSY SG572	70	Oven	BEKO SG 572 S	418920417	CONTROL PANEL FIXING SHEET	450
Oven	BEKO SG 572 S	415920131	IGNITION FIXING SHEET	71	Oven	BEKO SG 572 S	418920453	BURNER PLATE REAR FIXING SHEET*RIGHT.	473
Oven	BEKO SG 572 S	255100012	NOZZLE SEAL SCG180 SCD170	72	Oven	BEKO SG 572 S	418920452	STORAGE DRAWER FRONT SG752W	474
Oven	BEKO SG 572 S	431920026	THERMOSTAT 0.41 OVEN	74	Oven	BEKO SG 572 S	415920143	BURNER PLATE FIXING BRACKET*RIGHT	484
Oven	BEKO SG 572 S	410100032	GRILL OVEN BURNER JMB1602S	77	Oven	BEKO SG 572 S	415920144	BURNER PLATE FIXING BRACKET*RIGHT	485
Oven	BEKO SG 572 S	410100033	GRILL OVEN BURNER JMB1602S	78	Oven	BEKO SG 572 S	415920069	KNOB PROTECTION SHEET BOTTOM PART	489
Oven	BEKO SG 572 S	133900001	SEAL PLUG SCG180 SCD170	83	Oven	BEKO SG 572 S	468920007	GRILL OVEN SPARK PLUG	502
Oven	BEKO SG 572 S	418920553	KNOB PROTECTION SHEET UPPER DVC565S	84	Oven	BEKO SG 572 S	440100010	OVEN FIXING CHAIN	533
Oven	BEKO SG 572 S	525100001	50x50 INJECTOR HOLDER SCG180W	84	Oven	BEKO SG 572 S	255100027	BURNER PLATE FIXING SHEET DCGML6S	541
Oven	BEKO SG 572 S	515311003	BRACKET	95	Oven	BEKO SG 572 S	450920094	IGNITION BUTTON HOLDER ANTHRACITE	549
Oven	BEKO SG 572 S	242100003	BURNER SPARKING PLUG CLIP SCG180 v	86	Oven	BEKO SG 572 S	450920124	IGNITION BUTTON ANTHRACITE	550
Oven	BEKO SG 572 S	230311004	THERMAL GRILL ELEMENT 100/460-250 v	87	Oven	BEKO SG 572 S	463920003	ON/OFF IGNITION SWITCH	554
Oven	BEKO SG 572 S	230311005	THERMAL OVEN ELEMENT 100/460-1100v	88	Oven	BEKO SG 572 S	418920418	SIDE WALL FIXING SHEET*LEFT	581
Oven	BEKO SG 572 S	415311002	OVEN BURNER PROTECTION SHEET	109	Oven	BEKO SG 572 S	418920419	SIDE WALL FIXING SHEET*RIGHT.	581
Oven	BEKO SG 572 S	415311001	OVEN BURNER SIDE PROTECTION SHEET	110	Oven	BEKO SG 572 S	415100013	REAR FIXING PLATE	625
Oven	BEKO SG 572 S	415311003	OVEN BURNER FIXING SHEET	111	Oven	BEKO SG 572 S	260100009	SWITCH BUTTON CABLE	657
Oven	BEKO SG 572 S	431100009	NATURAL GAS INJECTOR OVEN / GRILL v	113	Oven	BEKO SG 572 S	415920023	PLATE HINGE LH	675
Oven	BEKO SG 572 S	461900007	SUPPLY CORD	119	Oven	BEKO SG 572 S	415920024	PLATE HINGE RH	676
Oven	BEKO SG 572 S	418920421	KICK PLATE EST5SI	130	Oven	BEKO SG 572 S	410920375	MAIN OVEN DOOR OUTER SG572S	735
Oven	BEKO SG 572 S	415920046	SIDE WALL TOP REINFORCEMENT	135	Oven	BEKO SG 572 S	179100029	M4 ASSEMBLING NUT SCC2631	318
Oven	BEKO SG 572 S	415100006	SIDE WALL TOP REINFORCEMENT	139	Oven	BEKO SG 572 S	242100004	THERMOSTAT BULB CLIP SCG180 SCD170	489
Oven	BEKO SG 572 S	415100017	Q 16 TAP SECURING PIPE CLIP SCG180v	165	Oven	BEKO SG 572 S	485920563	INSTRUCTION BOOK	500
Oven	BEKO SG 572 S	140954006	GRILL TRAY RACK ALL COOKERS(NOT COMPACT)	205					